

SteelVine Manager Installation (Windows)

Introduction

The SteelVine Manager Storage Appliance is a two-drive array that connects to the SATA connector on your host computer.

Prerequisites

Hardware F

- Intel PIII 500MHz equivalent or faster
- 64 MB of RAM minimum
- 250 MB of free hard disk space
- Super VGA (800 x 600) or higher resolution with 256 colors
- Mouse or compatible pointing device
- SATA host compatible support

O.S. F

- Microsoft Windows 2000, Windows XP, or Windows Server 2003 with the latest service pack installed

Procedure

Please follow these steps to install the SteelVine Manager software:

1. Double-click the **SteelVineManager_V<number>.exe** file.
2. Click **Next** to acknowledge the welcome message.
3. Read the software license agreement and click **Yes**.
4. Read the release-specific Read Me information and click **Next**.
5. Take the default installation location for the SteelVine Manager, or browse to an alternate location, and click **Next**.
6. Select the Program Folder into which the SteelVine Manager shortcut should be placed and click **Next**.
7. Review the installation settings and click **Next** to install the SteelVine Manager.
8. When the installation has completed, click **Finish**.
9. Select Start > All Programs > SteelVine > SteelVineManager to start the SteelVine Manager.